

Built-In Radiant Wall Heaters

MODELS: 9356 & 9358

9356 (1200 Wattage/120VAC)

9358 (1500 Wattage/120VAC)

**Do not mount over tub or shower stall enclosure.
Do not install closer than 12" to the adjacent wall.**

MOUNTING THE ROUGH-IN HOUSING NEW CONSTRUCTION

1. Remove the heater unit from the rough-in housing by removing the two screws at the top and bottom of the grille.
2. Insert the hanger brackets into the slots in the top housing against the side of a wall stud at the desired height from the floor. Make sure the wiring compartment is at the bottom.
3. Space the front edge of the housing out from the stud so that the front edge of the housing will be flush with the finished wall. Secure the housing to the stud with screws or nails through the mounting holes in the sides of the housing.
4. Extend hanger brackets from housing to the adjacent stud and drive the brackets against the stud to secure. Additional nails or screws must be used to secure the brackets.

EXISTING CONSTRUCTION

1. Select a convenient location for installing the heater. Make sure space between wall studs does not contain wiring, heat ducts, plumbing, etc. which will interfere with heater installation.
2. Drill a small hole in the wall at desired location. Using a coat hanger or other still wire, locate the nearest wall stud. Cut a slot from the hole to the nearest stud to help locate the side of the stud.
3. Place the housing against the wall so that one side is aligned with the side of the wall stud. Use housing as a template to mark cutout and make cutout in wall.
4. Install box connector in opening of wiring compartment and install wiring as described below.
5. Insert housing in wall opening and secure to wall stud using screws or nails through the holes in the sides of housing. (Note: The wall opening may need to be notched for the box connector and wiring.)
6. Wire and mount the heater unit as described below.

WIRING

BE SURE UNIT IS GROUNDED AND WIRING COMPLIES WITH LOCAL CODES.

1. Run 120VAC house supply wiring, two conductor with ground, to heater location. The unit should be installed on a separate 15 Amp branch circuit.
2. Install a box connector in the opening in the bottom of the wiring compartment and run the wire through the connector into the wiring compartment.
3. Insert the black and white wires from the heater unit into the hole on the top of the wiring compartment. Connect the black wire to the black (hot) supply wire and connect the white wire to the white (neutral) supply wire. Connect the supply ground wire to the green ground screw in the wiring compartment.

MOUNTING THE HEATER UNIT

1. Place heater unit into the rough-in and secure to the housing with the two screws previously removed.
2. Install control knob on thermostat shaft. Align flat on shaft with flat in knob and press on.

OPERATION

Models 9356 and 9358 are controlled by a thermostat switch. Set control for desired temperature for automatic control for desired temperature for automatic control of heater. When the thermostat is in the "Off" position heater will not operate regardless of room temperature.

Always disconnect power at the circuit breaker box before cleaning or servicing the heater.

NuTone®

One Year Limited Warranty

WARRANTY OWNER: NuTone warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workmanship for a period of one (1) year from the date of original purchase. **THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

During this one year period, NuTone will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service. THIS WARRANTY DOES NOT EXTEND TO FLUORESCENT LAMP STARTERS OR TUBES, FILTERS, DUCT, ROOF CAPS, WALL CAPS AND OTHER ACCESSORIES FOR DUCTING. This warranty does not cover (a) normal maintenance and service or (b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by NuTone), faulty installation or installation contrary to recommended installation instructions.

The duration of any implied warranty is limited to the one year period as specified for the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

NUTONE'S OBLIGATION TO REPAIR OR REPLACE, AT NUTONE'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. NUTONE SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties.

WARRANTY SERVICE: To qualify for warranty service, you must (a) notify NuTone at the address stated below or telephone 1/800-543-8687, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.

Date of Installation

Builder or Installer

Model No. and Product Description

IF YOU NEED ASSISTANCE OR SERVICE:

For the location of your nearest NuTone Independent Authorized Service Center:

Residents of the contiguous United States Dial Free 1-800-543-8687

Please be prepared to provide:

Product model number • Date and Proof of purchase • The nature of the difficulty

Residents of Alaska or Hawaii should write to: NuTone Inc. Attn: Department of National Field Service, 4820 Red Bank Road, Cincinnati Ohio 45227-1599.

Residents of Canada should write to: Broan-NuTone Canada, 1140 Tristar Drive, Mississauga, Ontario, Canada L5T 1H9.

Rev. 03/2001

Product specifications subject to change without notice.

NuTone®

4820 Red Bank Road, Cincinnati, Ohio 45227
Printed in U.S.A., Rev. 5/2001, Part No. 15336