

## Door Answering Intercom

**MODEL: IK-15**

### DOOR ANSWERING


When a caller presses the door speaker's pushbutton, you will hear the chime tone through the master speaker. The intercom conversation is controlled by the master speaker. When you hear the chime, go to the master speaker and press down on the TALK button. Keep the button depressed to talk to the door speaker. To listen to the door speaker, release the TALK button.

The door speaker operates "hands-free". When the master speaker's TALK button is released, the caller speaks without using any controls. When you release TALK button, the door speaker will be active until it times out or until you press the master speaker's TALK button again.

The timeout period is for 15 seconds.


### TIMEOUT ADJUSTMENT

If you desire a longer timeout period, you may adjust it up to 35 seconds. Adjust the timeout by turning the TIMEOUT thumbwheel pot clockwise to increase the time. The thumbwheel pot is located on the printed circuit board, and access to this control requires removing the master speaker from its mounted position. See Figure 1.

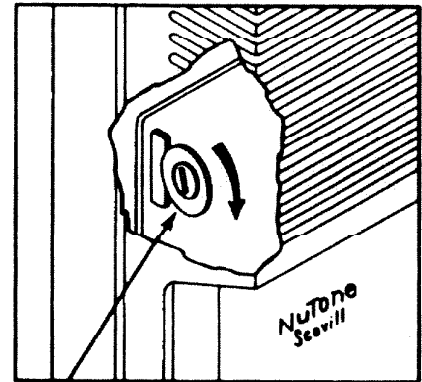

Timeout  
Thumbwheel

FIGURE 1

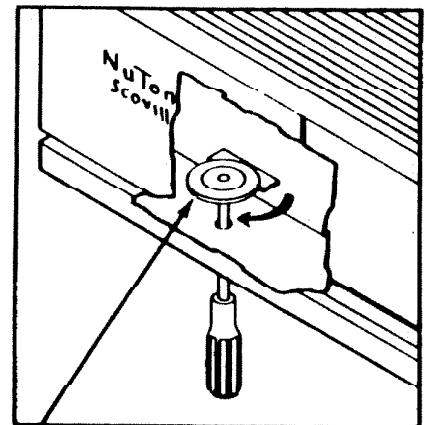

Volume  
Control

FIGURE 2

### VOLUME LEVEL

The volume level is factory set. However, if you want to adjust the volume level, use a small screwdriver through the hole in the location of the speaker to make the adjustment. Turn the control clockwise to increase volume. See Figure 2.