

Two-Note Non-Electric Door Chime - with Viewer

MODEL: MCV-309N

- The Non-Electric Chime mounts directly through the door and will accommodate door thicknesses of $\frac{3}{4}$ " to 2".
- The chime is equipped with a viewer.

LOCATING THE DOOR CHIME




1. The chime should be mounted in the center of the door - approximately $4\frac{1}{2}$ feet to 5 feet above the floor. **NOTE:** Be sure there are no obstructions on the inside of the door to interfere with the chime's baseplate.
2. Refer to Figure 1. Mark the location of the mounting holes parallel to the edge of the door. **NOTE:** It is important that the holes are parallel to the edge of the door for proper operation of the chime.

PUSHBUTTON ASSEMBLY

NOTE: If the pushbutton assembly is located in a position that is exposed to the rain, it is recommended that a bead of caulking material is placed around the 1" holes before the pushbutton assembly is installed.

NAME CARD HOLDER

1. Refer to Figure 2. Print or type name and address on card (supplied). Place the card in holder with printing toward the front and secure in place with metal trim.
2. Remove metal trim, name card holder, and name card from the pushbutton housing to reveal mounting holes.
3. Locate viewer and pushbutton shaft into predrilled holes until the mechanism is flush against the door and in place with mounting screws provided.
4. Refer to Figure 3. Secure metal trim in place by tightening the screw located at the bottom of the unit.

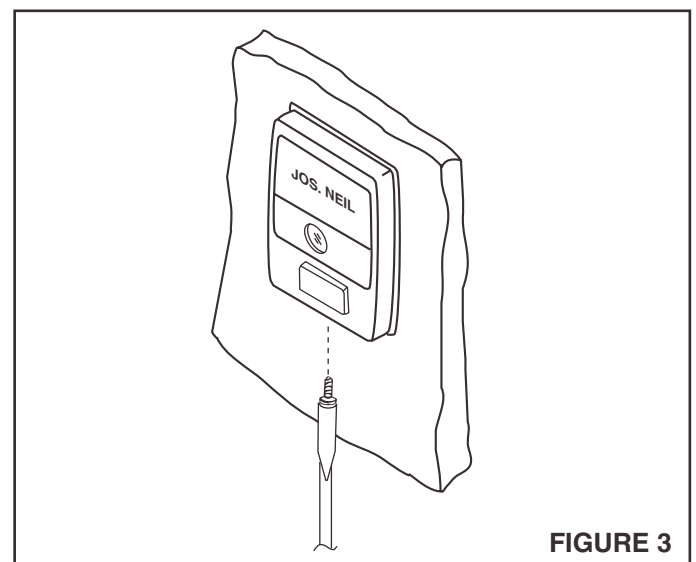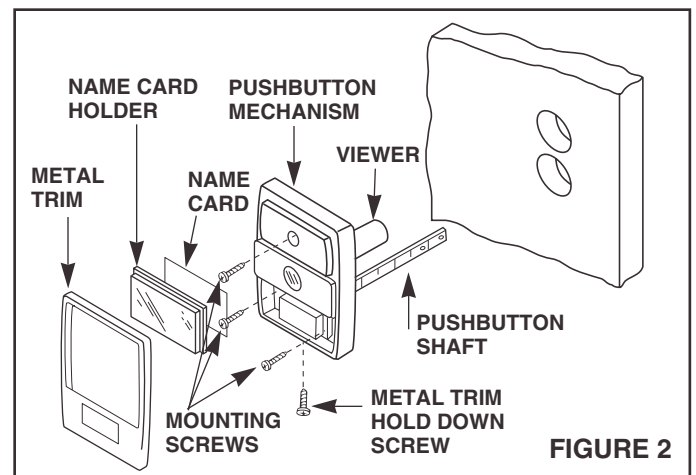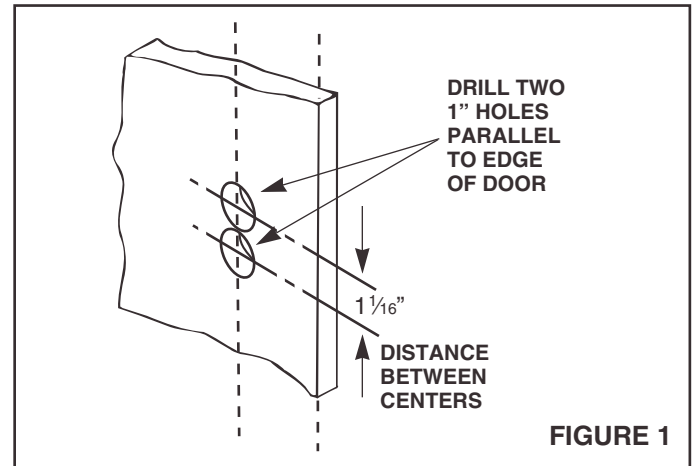

MOUNTING THE BASEPLATE

1. Refer to **Figure 4**. Position the baseplate mechanism over the pushbutton shaft and viewer. Align baseplate parallel with the edge of the door and insert the top and bottom mounting screws provided. Tighten screws securely.

OPERATION

1. Check the door chime by pressing the pushbutton. The chime should sound two (2) notes.
2. If the door chime does not operate properly, check the baseplate mechanism and pushbutton assembly. Both assemblies must be parallel to the door for proper chime operation.
3. If necessary, re-position the assembly.

MOUNTING THE CHIME COVER

Refer to **Figures 4 and 5**.

1. Break off the surplus pushbutton shaft to insure proper clearance when the cover is in place.
2. Place the tab located on top of the baseplate into the slot located in the top of the cover.
3. Position the cover over the tab and push cover flush with the door.

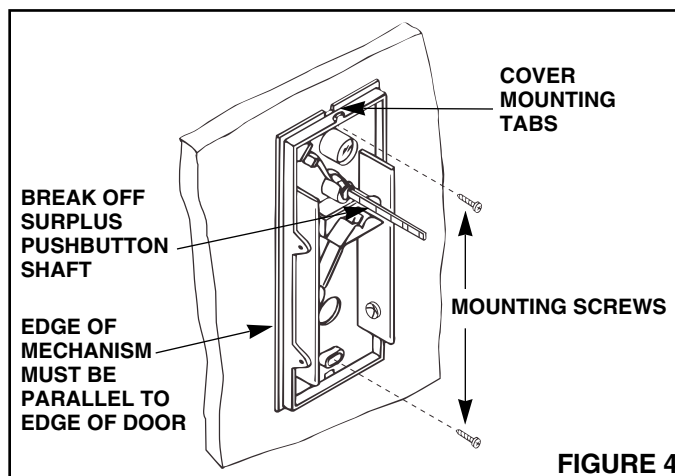


FIGURE 4

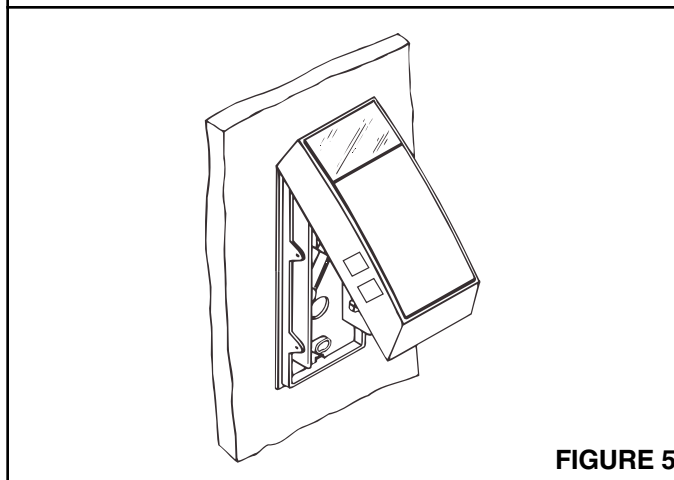


FIGURE 5

NuTone®

One Year Limited Warranty

WARRANTY OWNER: NuTone warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workmanship for a period of one (1) year from the date of original purchase. **THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

During this one year period, NuTone will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service. **THIS WARRANTY DOES NOT EXTEND TO FLUORESCENT LAMP STARTERS OR TUBES, FILTERS, DUCT, ROOF CAPS, WALL CAPS AND OTHER ACCESSORIES FOR DUCTING.** This warranty does not cover (a) normal maintenance and service or (b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by NuTone), faulty installation or installation contrary to recommended installation instructions.

The duration of any implied warranty is limited to the one year period as specified for the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

NUTONE'S OBLIGATION TO REPAIR OR REPLACE, AT NUTONE'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. NUTONE SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties.

WARRANTY SERVICE: To qualify for warranty service, you must (a) notify NuTone at the address stated below or telephone 1/800-543-8687, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.

Date of Installation

Builder or Installer

Model No. and Product Description

IF YOU NEED ASSISTANCE OR SERVICE:

For the location of your nearest NuTone Independent Authorized Service Center:

Residents of the contiguous United States Dial Free 1-800-543-8687

Please be prepared to provide:

Product model number • Date and Proof of purchase • The nature of the difficulty

Residents of Alaska or Hawaii should write to: NuTone Inc. Attn: Department of National Field Service, 4820 Red Bank Road, Cincinnati Ohio 45227-1599.

Residents of Canada should write to: Broan-NuTone Canada, 1140 Tristar Drive, Mississauga, Ontario, Canada L5T 1H9.

Rev. 03/2001