

Sleeve Board

MODEL AVC-SL1

1. Locate the sleeve board hook 1-1/2" from the left side of the cabinet and 4" down from the bottom of the shelf as shown in the illustration.
2. Make sure that the area where the hook is to be applied is thoroughly cleaned and dried.
3. Remove protective backing from the sleeve board hook and press adhesive surface firmly against cabinet.

NOTE: Hanging bracket also serves as a lock for the sleeve board when in the ironing position and as a release for folding the board for storage.


VEUILLEZ LIRE ET CONSERVER CES
INSTRUCTIONS

Jeannette

MODEL AVC-SL1

1. Installez le support pour la jeannette à 1,5 pounce du côté gauche de l'armoire et 4 pounces en dessous de la tablette, comme l'indique l'illustration.
2. Assurez-vous que la surface sur laquelle le support est collé est bien propre et complètement sèche.
3. Enlevez l'endos protecteur du support pour la jeannette et pressez fermement la surface adhésive contre l'armoire.

REMARQUE: Le crochet de suspension sur la jeannette sert également à bloquer cette dernière en position pour le repassage et comme levier de déblocage pour plier la jeannette lors du rangement.

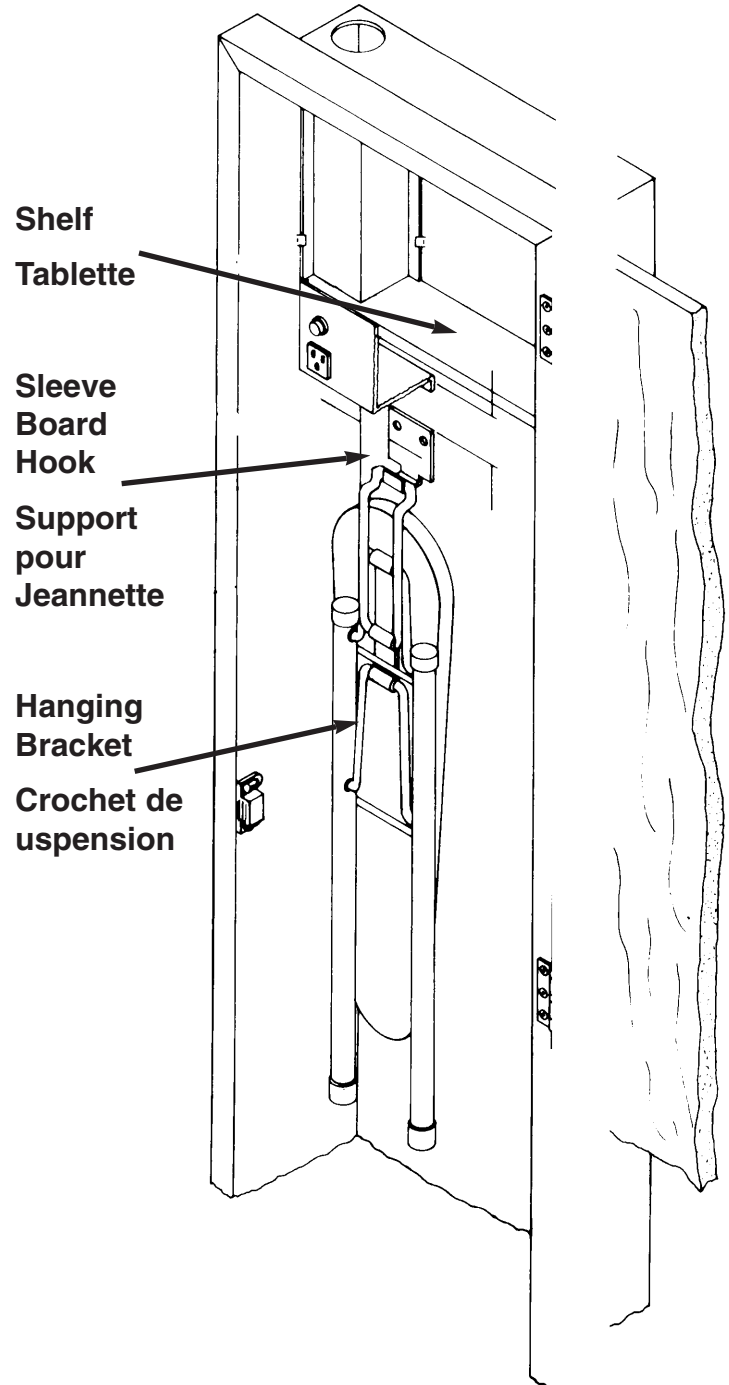

Product specifications subject to change without notice.
Les caractéristiques peuvent être modifiées sans préavis

NuTone®

4820 Red Bank Road, Cincinnati, Ohio 45227

Printed in U.S.A., Imprimé aux E.-U., 4/01, Part No. 34902