



**INSTALLATION INSTRUCTIONS
READ & SAVE THESE INSTRUCTIONS!**

Rough-In Housing


MODEL: IR-4

For use with conduit wiring.

Secure the rough-in to a stud through the mounting flanges with 3/4" x No. 8 wood screws.

Run conduit cables into the rough-in through one of the knockouts. Remove the plug in the hole by inserting a screwdriver into the slot and prying the plug out.

Refer to the installation instructions included with the Control Amplifier for complete Apartment House Communication wiring requirements.

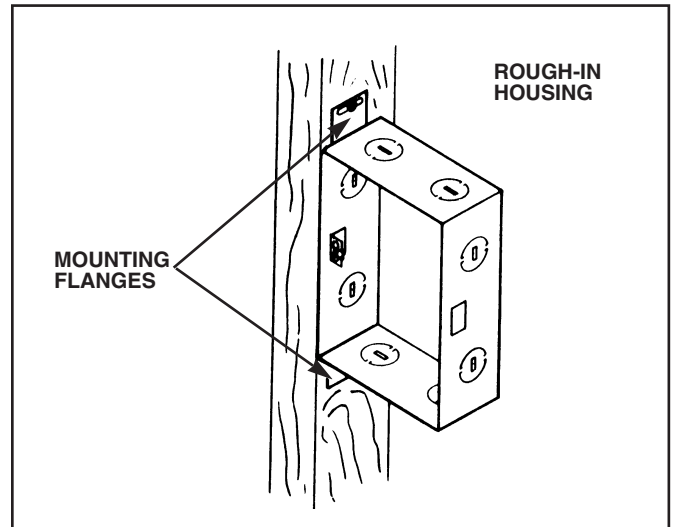

Product specifications subject to change without notice.



4820 Red Bank Road, Cincinnati, Ohio 45227
Printed in U.S.A., Rev. 4/01, Part No. 47131



**INSTALLATION INSTRUCTIONS
READ & SAVE THESE INSTRUCTIONS!**

Rough-In Housing


MODEL: IR-4

For use with conduit wiring.

Secure the rough-in to a stud through the mounting flanges with 3/4" x No. 8 wood screws.

Run conduit cables into the rough-in through one of the knockouts. Remove the plug in the hole by inserting a screwdriver into the slot and prying the plug out.

Refer to the installation instructions included with the Control Amplifier for complete Apartment House Communication wiring requirements.

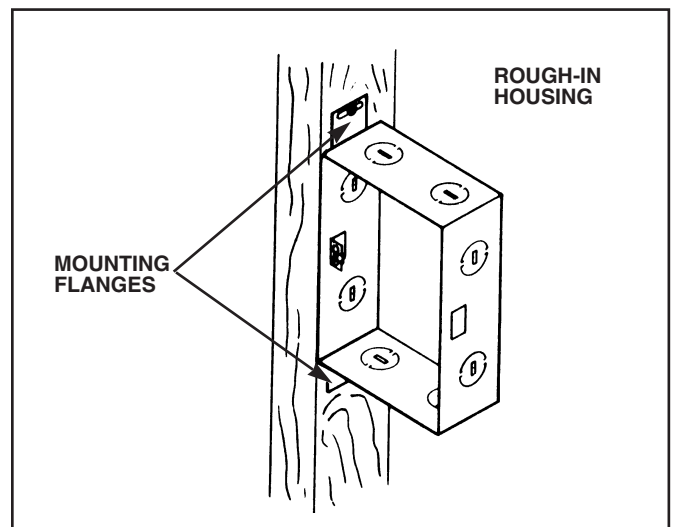

Product specifications subject to change without notice.



4820 Red Bank Road, Cincinnati, Ohio 45227
Printed in U.S.A., Rev. 4/01, Part No. 47131