

# Electric Door Release

Apartment House Communications  
& Lock Control System Accessory  
**For hollow metal door frames.**

## MODEL DR-2-SA

1. Make cutout in door jamb, according to dimensions shown.
2. Drill and countersink two holes for 8-32 flat-head screws, as shown.
3. Install Mounting Clips to door jamb using 8-32 x 3/8" screws and pressed metal nut. Leave screws slightly loose to permit easy alignment with Electric Strike case. See Note before installing.


**NOTE: Spacers are provided to make the Face Plate flush to the door jamb.**

If Face Plate extends beyond door jamb, add one or more Spacers between Mounting Clips and door jamb.

If Face Plate sets inside door jamb, add Spacer(s) between the Mounting Clip and the Electric Strike case.

To mount Spacer, remove protective coating and press to Mounting Clip, aligning clearance hole in Spacer with hole in Mounting Clip.

4. Connect Door Release to wiring from the Apartment House Communication System provided in the building. (Refer to system installations instruction for wiring details.)
5. Insert Electric Release into door jamb by tipping Solenoid Coil into place behind the top Mounting Clip, then slide unit onto Mounting Clips. Secure with supplied No. 10 screws and lockwashers.

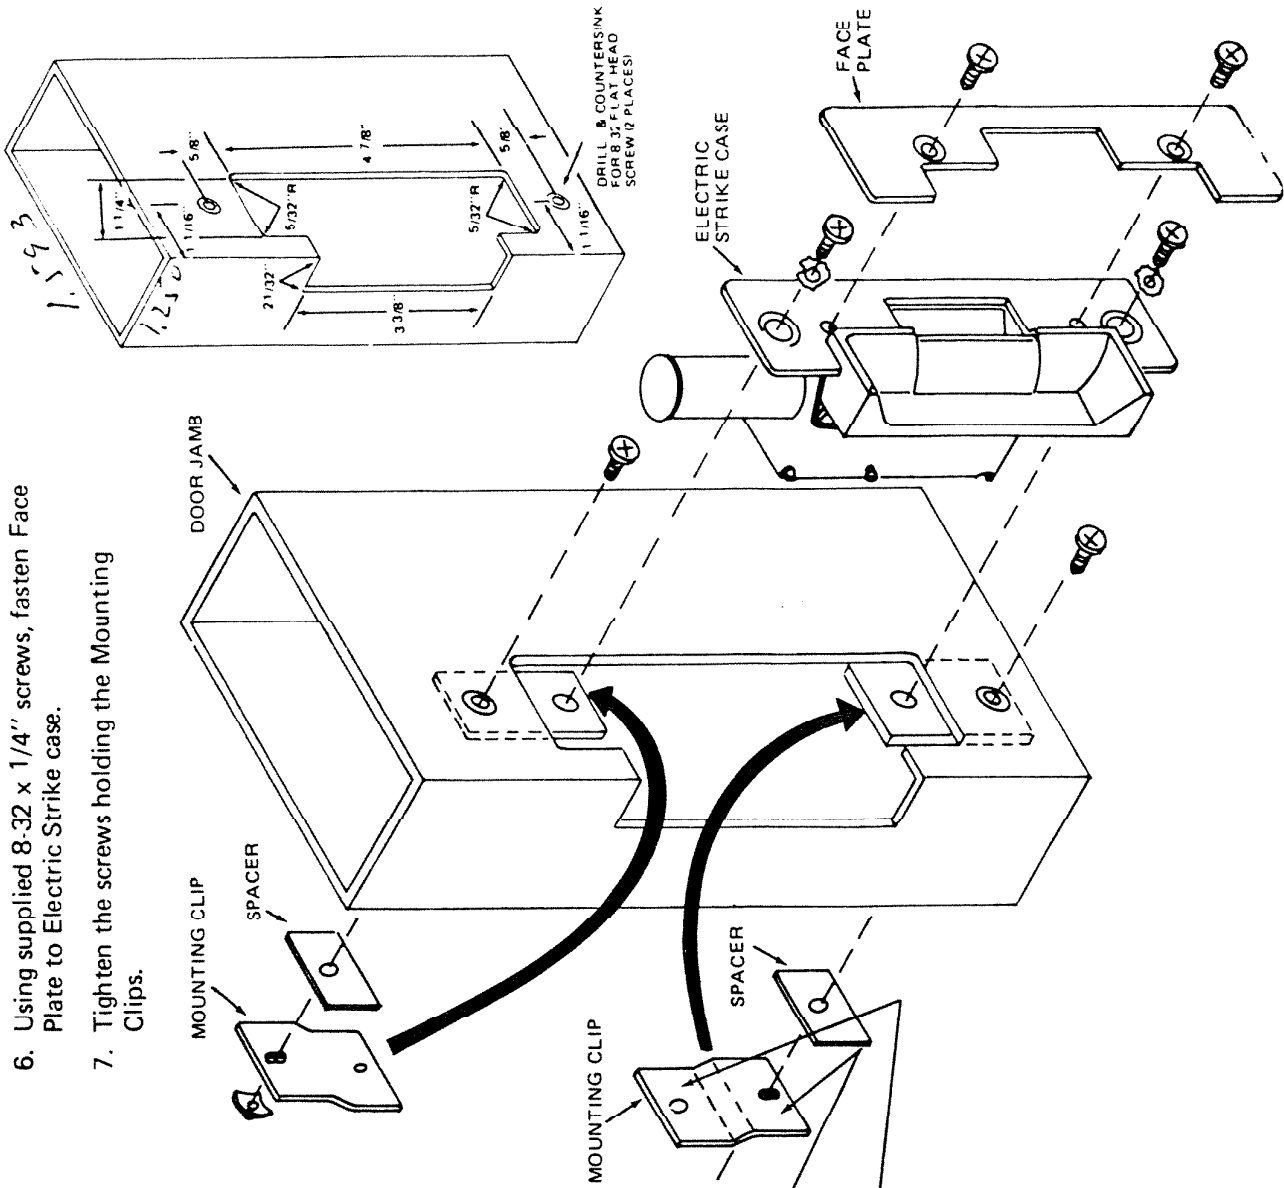

6. Using supplied 8-32 x 1/4" screws, fasten Face Plate to Electric Strike case.

7. Tighten the screws holding the Mounting Clips.